

TIMBERTILES

Interior wood tile for walls, backsplash and accents.
Fully finished with Saicos Hard Wax Oil, ultra matt finish.

Install over flat drywall or plywood.

Apply with construction adhesive & 23 gauge pins.

Zero VOC MOH 2

Chemical, scratch and stain resistant.

Repells water / vapour open.

100% owned and produced in Canada.

PLACE BUSINESS CARD
OR STICKER HERE



Kodiak Bear

SKU#SR4HFA1S203485



Red Fox

SKU#

To Be Announced



Subway Tile

80mm x 330mm x 10mm

(3 1/4 in. x 13 in. x 3/8 in.)

3mm (1/8 in.) Reveal/Révélér

72 Pieces / Pièces

2 m² (21.5 ft²) Area / Surface

10 Kg (21.5 lb.) Weight / Poids



Mountain Cougar

SKU# SR4HFA1S003410



Grey Wolf

SKU#

To Be Announced



25 Degree Chevron

80mm x 271mm x 10mm

(3 1/4 in. x 10 11/16 in. x 3/8 in.)

3mm (1/8 in.) Reveal/Révélér

72 Pieces / Pièces


1.64 m² (17.6 ft²) Area / Surface

8 Kg (17.6 lb.) Weight / Poids



Spirit Bear

SKU# SR4HFA1S003409

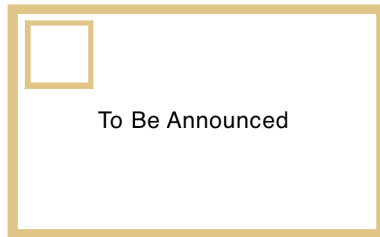

Black Raven

SKU#

To Be Announced



To Be Announced



SALISH SERIES VANCOUVER ISLAND

PREPARATION:

- 1. Acclimatize tile:** Open boxes and remove plant-based, compostable eco-shrink film. Allow tile to warm to room temperature. One week is recommended.
- 2. Gather tools:** A few hand tools will make installation simpler. Follow safety guidelines from tool manufacturer, including the use of glasses, dust mask, and hearing protection.
- 3. Prepare wall:** Tiles to be applied to a dry, flat substrate, such as drywall or plywood. Clean and wipe down the wall.
- 4. Plan layout:** Establish a level line to work from. Choose a tile pattern, considering reveals, borders, obstacles.

INSTALLATION:

- 1. Apply adhesive:** Use a trowel or gun to apply urethane wood floor adhesive. A centered dollop of construction adhesive will also work.
- 2. Lay tile:** Install a straight base line of tile. Use 23 gauge, 18mm (3/4"), pin nails in edge lap to secure the tile. Continue adding courses, working from left to right, bottom to top. Maintain straight, level, plumb courses.
- 3. Cut to fit:** Firmly clamp to a work surface before cutting. We recommend using a jigsaw, multi tool, handsaw, or band saw. Pre-drill before screwing into tile to avoid splitting. Scribe tiles around obstacles.
- 4. Finish up:** Leave 1/2" expansion gap around perimeter. Trim with wood moulding or tile edging. Clean up, stand back and admire. Please post to social media #timbertiles

Manufactured by:
ReaplyWOOD

Design and Research Inc.
3113 2nd Ave. Port Alberni,
BC, Canada V6R 3C8
tel. 604.240.3471



LIVING
PRODUCT
CHALLENGE
PENDING



Distributed in Canada by:
Bullnose Tile and Stone Ltd.
#131 bldg 9 burbridge st.
coquitlam bc v3k 7b2

www.**Bullnosetile.com**

tel. 604.222.2626
Info@bullnosetile.com

www.**TIMBERTILES.CA**